


Standard Fox Contrabassoon

Key Numbers & Names

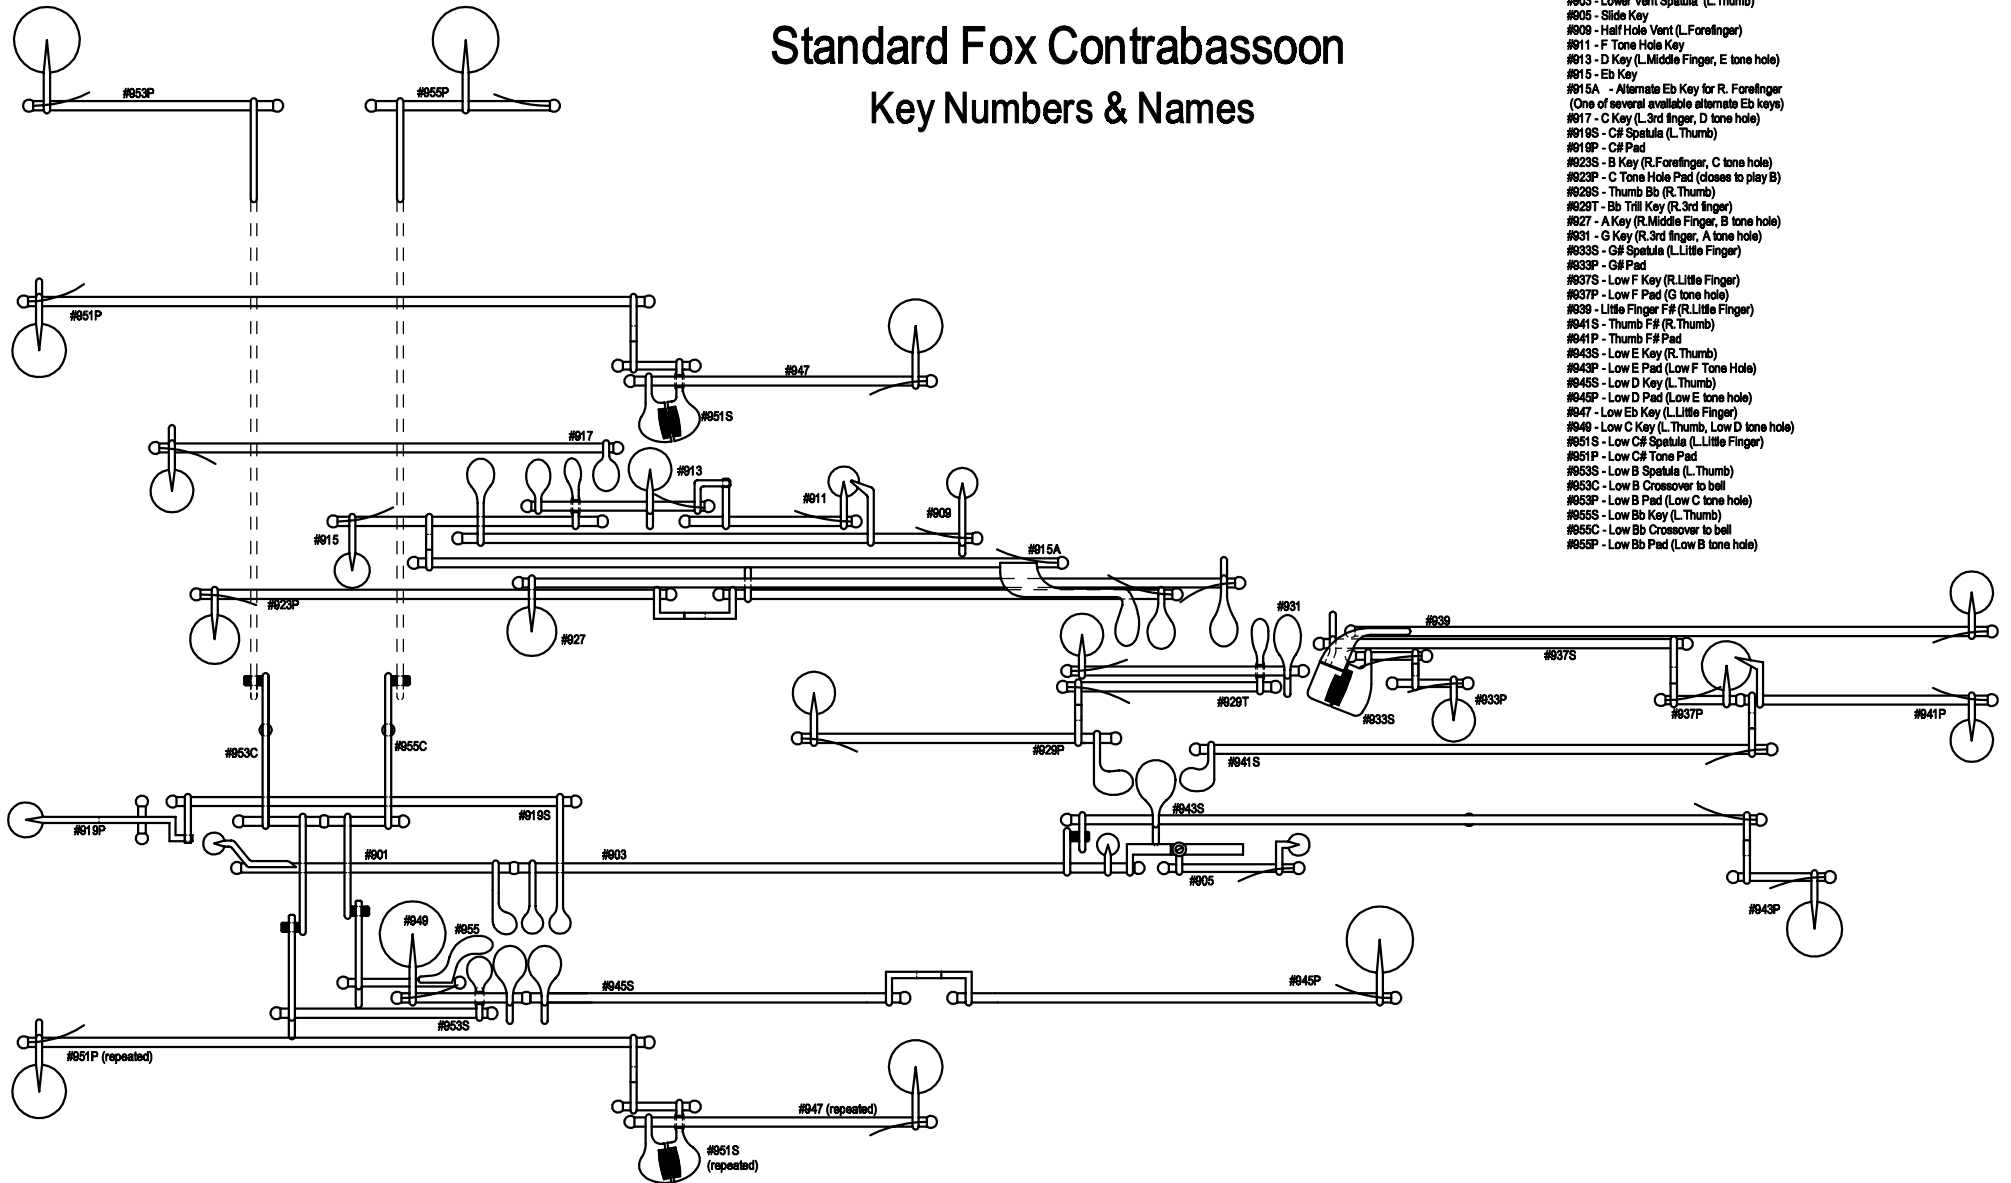

- #901 - Upper Vent Spatula (L. Thumb)
- #903 - Lower Vent Spatula (L. Thumb)
- #905 - Slide Key
- #909 - Half Hole Vent (L. Forefinger)
- #911 - F Tone Hole Key
- #913 - D Key (L. Middle Finger, E tone hole)
- #915 - Eb Key
- #915A - Alternate Eb Key for R. Forefinger
(One of several available alternate Eb keys)
- #917 - C Key (L. 3rd finger, D tone hole)
- #919S - C# Spatula (L. Thumb)
- #919P - C# Pad
- #923S - B Key (R. Forefinger, C tone hole)
- #923P - C Tone Hole Pad (closes to play B)
- #928S - Thumb Bb (R. Thumb)
- #928T - Bb Trill Key (R. 3rd finger)
- #927 - A Key (R. Middle Finger, B tone hole)
- #931 - G Key (R. 3rd finger, A tone hole)
- #933S - G# Spatula (L. Little Finger)
- #933P - G# Pad
- #937S - Low F Key (R. Little Finger)
- #937P - Low F Pad (G tone hole)
- #939 - Little Finger F# (R. Little Finger)
- #941S - Thumb F# (R. Thumb)
- #941P - Thumb F# Pad
- #943S - Low E Key (R. Thumb)
- #943P - Low E Pad (Low F Tone Hole)
- #945S - Low D Key (L. Thumb)
- #945P - Low D Pad (Low E tone hole)
- #947 - Low Eb Key (L. Little Finger)
- #948 - Low C Key (L. Thumb, Low D tone hole)
- #951S - Low C# Spatula (L. Little Finger)
- #951P - Low C# Tone Pad
- #953S - Low B Spatula (L. Thumb)
- #953C - Low B Crossover to bell
- #953P - Low B Pad (Low C tone hole)
- #955S - Low Bb Key (L. Thumb)
- #955C - Low Bb Crossover to bell
- #955P - Low Bb Pad (Low B tone hole)